



# MCR Division 2 "Simplified" T-trak module construction - Corner

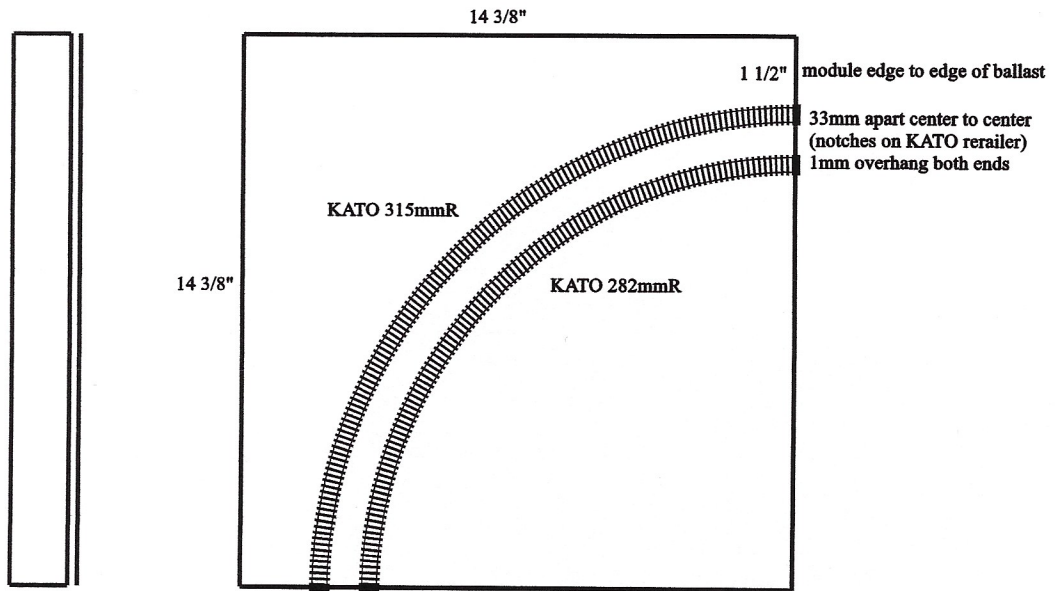

3mm, 5mm, 1/8", 1/4" plywood,  
or Homosote Top

'Square off' each corner.  
Find center and drill  
5/16" hole 1 1/2" deep  
for 1/4"-20 T-nut.

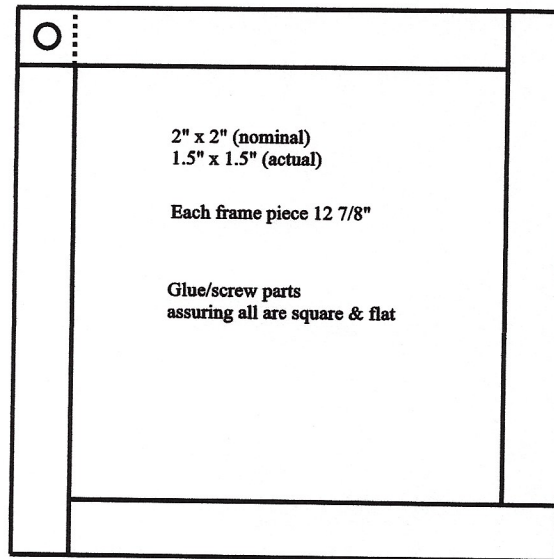

Not to Scale  
DJV 12/2018