



MCR Division 2 "Simplified" T-trak module construction - Triple

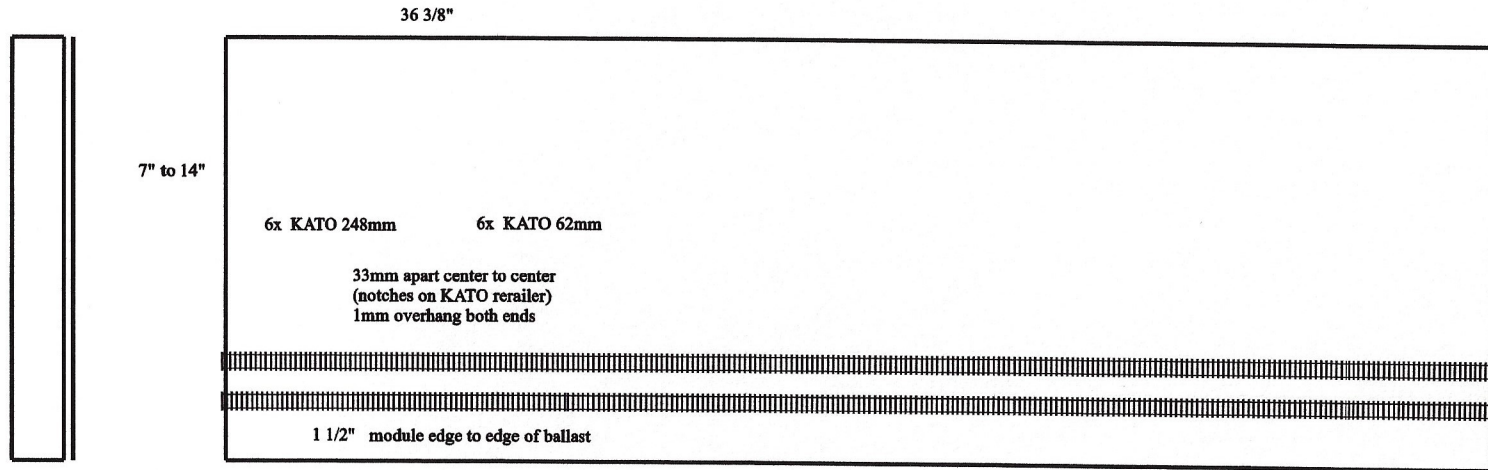

3mm, 5mm, 1/8", 1/4" plywood,
or Homosote Top

`Square off' each corner.
Find center and drill
5/16" hole 1 1/2" deep
for 1/4"-20 T-nut.

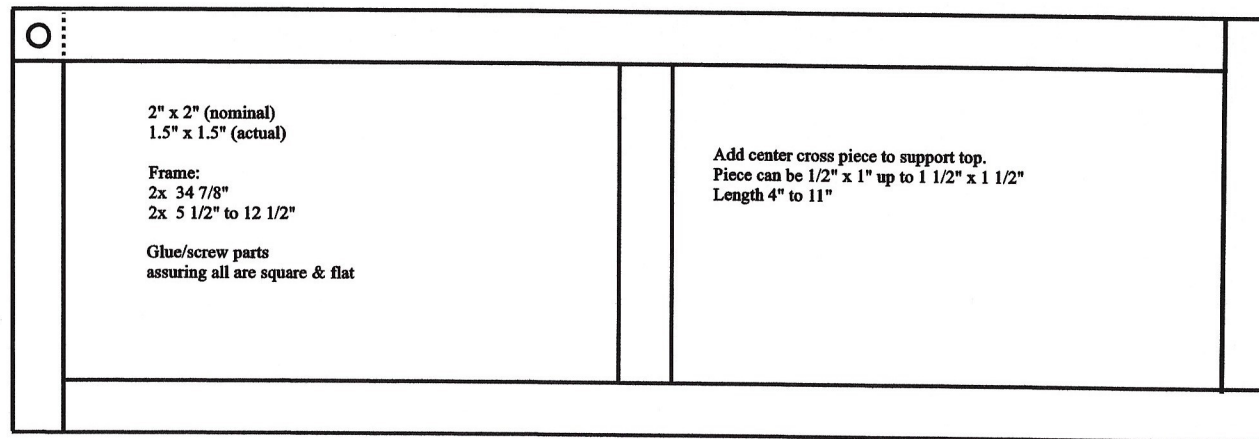

Not to Scale

DJV 12/2018